

# 6200-2 Appliance Tester

## Quick Reference Guide


### ⚠️ Warning

To prevent possible electrical shock, fire, or personal injury, read the "6200-2/6500-2 Safety Information" before you use this Product.

Go to [www.fluke.com](http://www.fluke.com) to register your product, download manuals, and find more information.

INSULATION / R<sub>ISO</sub>

### • Insulation Test Class II

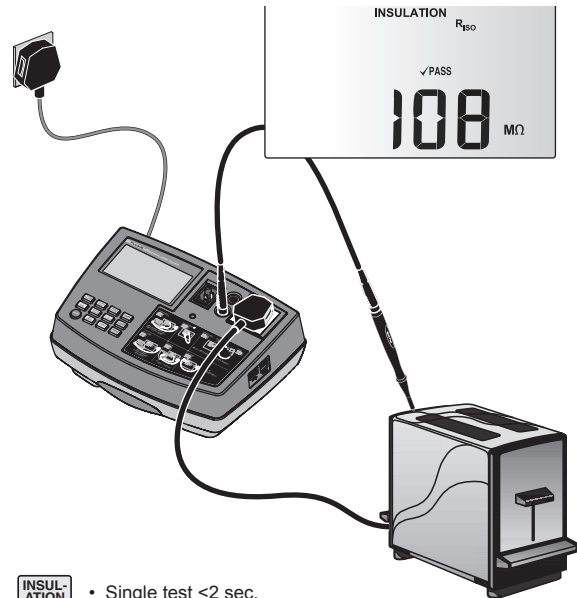


LOAD/LEAK / I<sub>A</sub>/I<sub>L</sub>

### • Load/Leak Current Test




IEC LEAD / KALTGE- RATELEIT

### • IEC-Lead Test

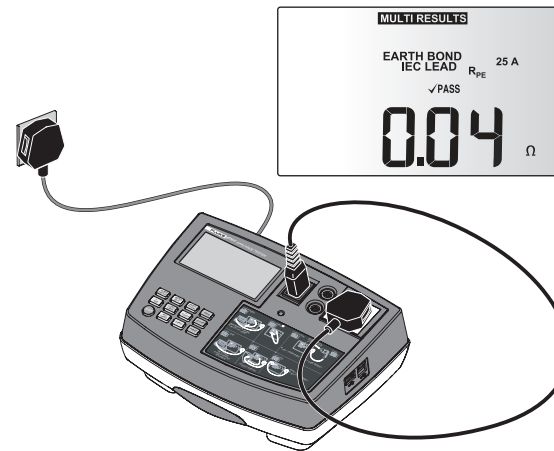


### Printer Connection

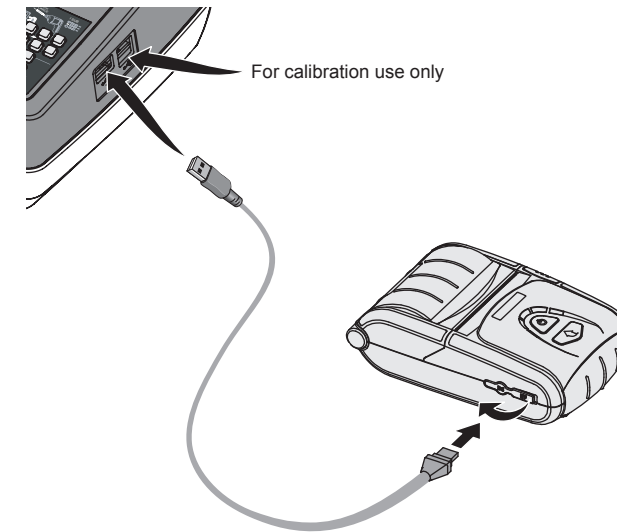

ZERO / KOMP


### • Bond Zero Test

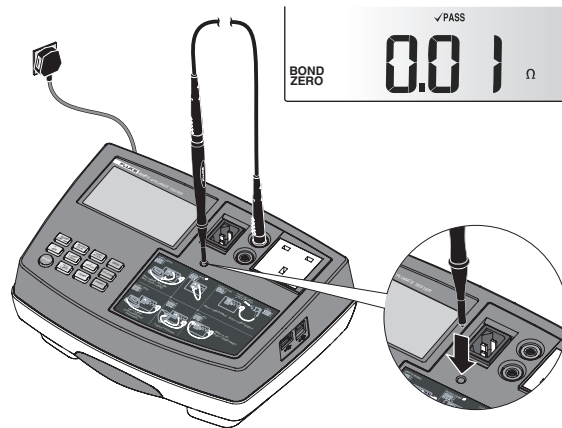

- Single test <2 sec.
- Continuous test >2 sec.


I<sub>SUB</sub> / I<sub>EA</sub>

### • Substitute Leakage Test Class II

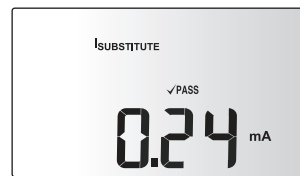


INSULATION / R<sub>ISO</sub>

### • Insulation Test Class I

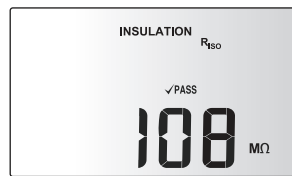

BOND 200 mA • BOND 25 A / R<sub>PE</sub> 200 mA • R<sub>PE</sub> 10 A


### • Bond Test

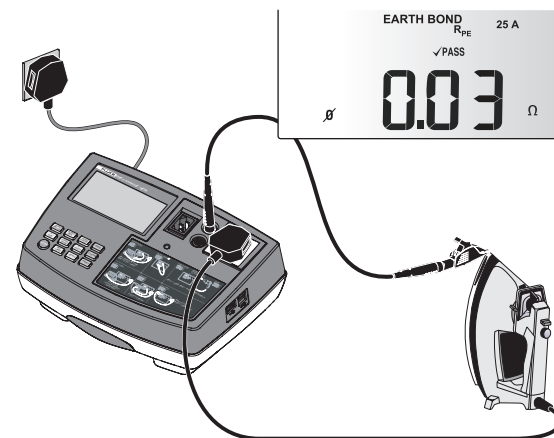

- Single test <2 sec.
- Continuous test >2 sec.


I<sub>TOUCH</sub> / I<sub>B</sub>

### • Touch Current Test

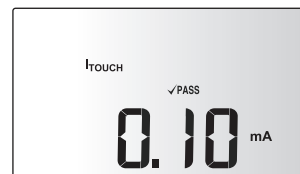

I<sub>SUB</sub> / I<sub>EA</sub>

### • Substitute Leakage Test Class I

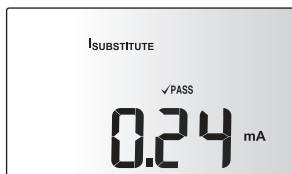

# 6500-2 Appliance Tester


Quick Reference Guide

**⚠️ Warning**


To prevent possible electrical shock, fire, or personal injury, read the "6200-2/6500-2 Safety Information" before you use this Product.

Go to [www.fluke.com](http://www.fluke.com) to register your product, download manuals, and find more information.


**SET UP** • Bond Zero Test

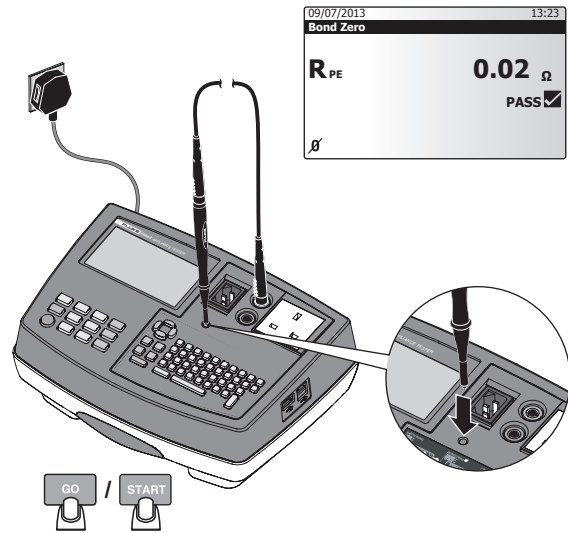


**BOND** 200 mA / **BOND** 25 A / **RPE** 200 mA / **RPE** 10 A • Bond Test

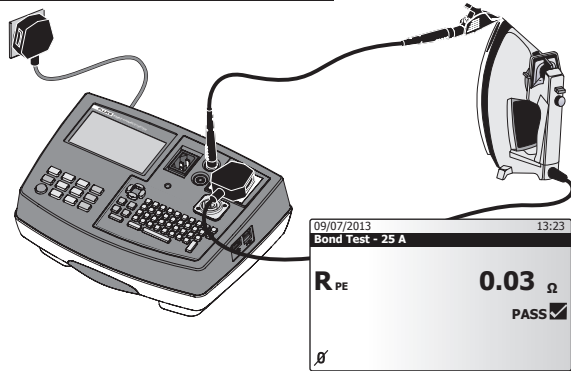


**IEC LEAD** / **KALTGE-RATELEIT** • IEC-Lead Test

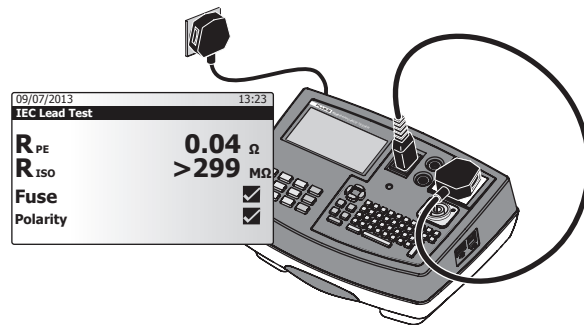


**LOAD/LEAK** / **I<sub>A</sub>/I<sub>L</sub>** / **RCD** • General-Purpose AC RCD Module Test

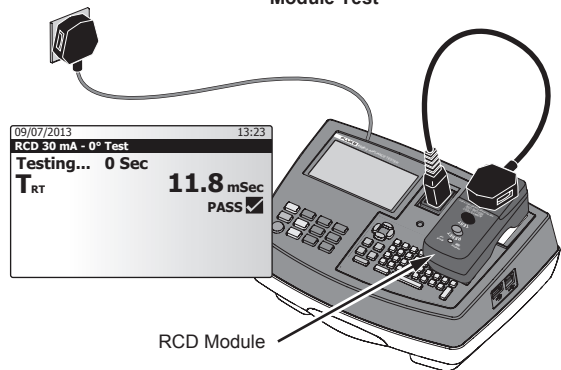


**INSULATION** / **R<sub>ISO</sub>** • Insulation Test Class I

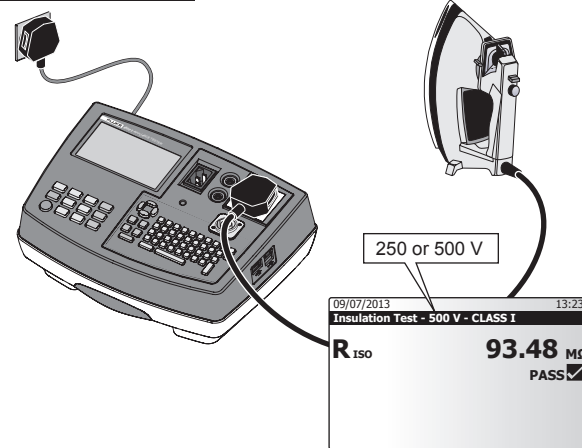

**LOAD/LEAK** / **I<sub>A</sub>/I<sub>L</sub>** • Load/Leakage Test

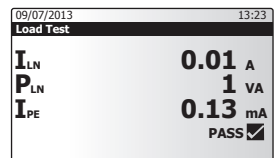


**I<sub>SUB</sub>** / **I<sub>EA</sub>** • Substitute Leakage Test Class I

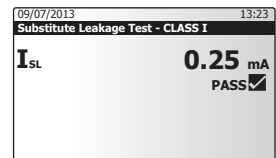


**AUTO** • Auto Test


Class I  
Class II  
⚠️ See Users Manual for more information.

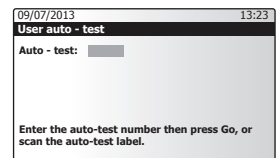


**INSULATION** / **R<sub>ISO</sub>** • Insulation Test Class II

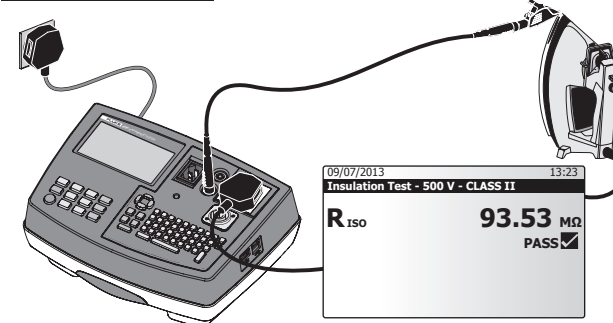


**I<sub>SUB</sub>** / **I<sub>EA</sub>** • Substitute Leakage Test Class II

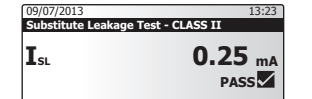

**TOUCH** / **I<sub>B</sub>** • Touch Current Test

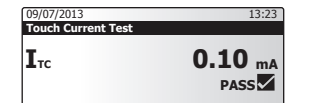

**110 V Line Testing**

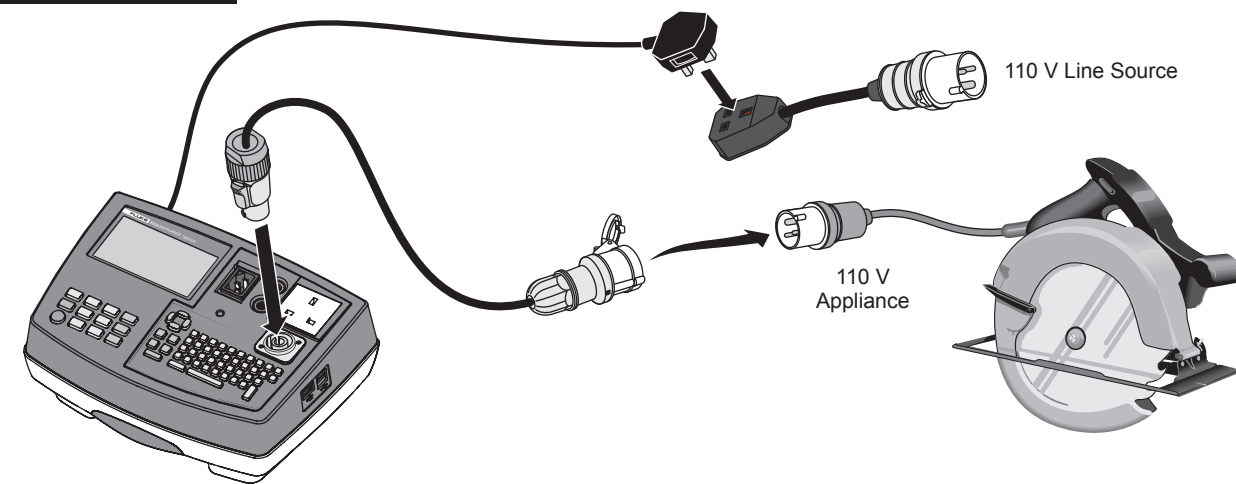

**PC/Scanner/Printer USB**

