

Manual Supplement

Manual Title:	8808A Getting Started	Supplement Issue:	3
Part Number:	2716412	Issue Date:	2/10
Print Date:	July 2007	Page Count:	2
Revision/Date:			

This supplement contains information necessary to ensure the accuracy of the above manual.

Change #1, 44931, 46479, 47892

On page 1, in the **Specifications** section, under **Relative Humidity (non-condensing)**, replace Operating with the following:

Operating..... <90 % (0 °C to 28 °C)
 <75 % (28 °C to 40 °C)
 <45 % (40 °C to 50 °C)

On page 5, under **DC Current, Shunt Resistance**, replace the Burden Voltage with the following:

Burden voltage <5 mV for 200 µA and 2 mA range.

In the **Input Characteristics** table, change the **Burden Voltage** for both 200 µA and 2 mA ranges,

From: <1 mV

To: <5 mV

Change #2

On page 6, under the Warning, replace steps 4 and 5, with the following:

4. Insert the other end of the test lead into the **mA** terminal. If the fuse is good, the Meter displays a reading of <10 Ω. If the fuse is blown, the Meter displays 0Λ to indicate an overload.
5. Remove the test lead from the **mA** terminal and insert it into the **10 A** terminal. If the fuse is good, the Meter displays a reading of <2 Ω. If the fuse is blown, the Meter displays 0Λ to indicate an overload.

Change #3, 53744

Under the **LIMITED WARRANTY AND LIMITATION OF LIABILITY** replace the second sentence with the following:

The warranty period is three years limited and begins on the date of shipment.

On page 11, replace Table 6 with the following:

Table 6. Accessories

Item	Model / Part Number
Premium Test Lead Set	TL71
Fuse, .25*1.25, 0.063 A, 250 V, Slow	163030
Fuse, .25*1.25, 0.125 A, 250 V, Slow	166488
F1 - Fuse, 11 A, 1000 V, Fast, 406INX1.5IN, BULK	803293
F2 - Fuse, 440 mA, 1000 V, Fast, 406INX1.375IN, BULK	943121
Rack Mount Kit 8845A & 8846A Single	Y8846S
Rack Mount Kit 8845A & 8846A Dual	Y8846D
USB to RS-232 Cable Adapter (included)	884x-USB
Precision Electronic Probe Set	TL910
2X4 Wire Ohms 1000 V Test Lead	TL2X4W-PTII
FlukeView Forms Basic Software (included)	FVF-SC5
FlukeView Forms Software Upgrade to enhanced version	FVF-UG

In the **Specifications** section on page 2, change the *Warranty*,

From: One year

To: Three years limited